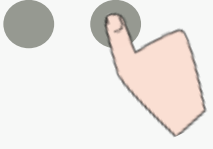


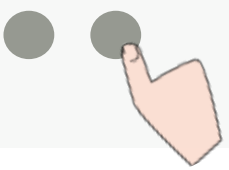

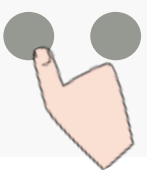

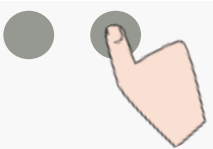


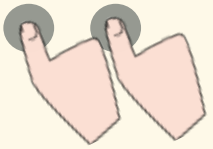





# IS40/IS40P/FALCON

## How to use the push buttons?\*

	PUSH BUTTONS	ACTION	LED	RESULT
START		<b>PUSH AND HOLD</b> the right button until the red LED flashes.	 	The red and green LED are flashing subsequently.
ADJUSTMENT		Pushing on the right button = scrolling through the different <b>PARAMETERS</b> .		The number of red flashes indicates the selected parameter.
		Pushing on the left button = increasing the <b>VALUE</b> of the displayed parameter by 1 unit.		The number of green flashes indicates the value of the current parameter (no LED, value = 0).
<i>Note: when the max. value or the last existing parameter is reached, it will return to its minimum value or first existing parameter.</i>				
STOP		<b>PUSH AND HOLD</b> the right button until the LEDs stop flashing.	 or 	If the red LED lights up, you are standing in the detection field and creating a detection.
<i>Note: if no button is pushed within 20 seconds, the adjustment session ends automatically.</i>				
FACTORY VALUES		<b>PUSH AND HOLD</b> both buttons for a few seconds. Exit and enter the adjustment session to verify.		
SETUP IR-FIELD		<b>BRIEFLY PUSH</b> the left button and step out of the detection field.	 	Both LEDs flash and switch OFF. (Not applicable for Falcon)

## IS40

	RC-symbol	Parameter n°	Factory value	Available values	
SENSITIVITY		x1	x7	0-9	
REJECTION MODE		x2	x1	1-5	
DETECTION MODE		x3	x2	1-3	
MAX. DURATION OF PRESENCE DETECTION		x4	x8	0-9	
TARGET SIZE		x5	x1	1-7	
IMMUNITY FILTER IR-FIELD		x6	x2	1-3	
FREQUENCY		x7	x1	1-2	
IR PATTERN SIZE		x8	x1	1-9	
MOTION CONFIGURATION		x9		0-3	NOT USED
OUTPUT		x10		0-6	
OUTPUT CONFIGURATION		x11	x1	1-4	NOT USED
MOTION HOLDTIME		x12		0-9	NOT USED

## IS40P

	RC-symbol	Parameter n°	Factory value	Available values	
MAX. DURATION OF PRESENCE DETECTION		x1	x8	0-9	
TARGET SIZE		x2	x1	1-7	
IMMUNITY FILTER IR-FIELD		x3	x2	1-3	
FREQUENCY		x4	x1	1-2	
IR PATTERN SIZE		x5	x1	1-9	
MOTION CONFIGURATION		x6		0-3	NOT USED
OUTPUT CONFIGURATION		x7	x1	1-4	NOT USED
MOTION HOLDTIME		x8		0-9	NOT USED

## FALCON

	RC-symbol	Parameter n°	Factory value	Available values	
FIELD SIZE		x1	x7	0-9	
HOLD TIME		x2		0-9	
OUTPUT CONFIGURATION		x3	x1	1-2	
DETECTION MODE		x4	x2	1-3	
DETECTION FILTER		x5	x1	1-6	

For more information, please visit [www.devancocanada.com](http://www.devancocanada.com) or call toll free at 855-931-3334