

# **GARAGE DOOR RADIO CONTROL**

## **PROGRAMMING INSTRUCTIONS**

### **For model CW-3000**

Remove the back cover from both the transmitter and the receiver for access to the code switches. Inside is a 10-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 10-bits dip switch to the code of your choice.

For example, bits numbered 1, 3, 5, 7, 9 are set to ON, bits numbered 2, 4, 6, 8, 10 are OFF in the transmitter as below:

	1	2	3	4	5	6	7	8	9	10
ON	■		■		■		■		■	
↑		■		■		■		■		■

Then, to match the code of the transmitter, set the same bits numbered at ON/OFF position as the corresponding bits in the receiver as above example.

Be sure both are set to the same code, since a different setting of just one dip switch will prevent operation.

**For more information, please visit [www.devancocanada.com](http://www.devancocanada.com)  
or call toll free at 855-931-3334**

## ***HOW TO ORDER REPAIR PARTS***

### **DEVANCO CANADA**

19192 HAY ROAD, UNIT Q  
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334  
[www.devancocanada.com](http://www.devancocanada.com)

**WHEN ORDERING REPAIR PARTS  
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

- ✓ PART NUMBER**
- ✓ DESCRIPTION**
- ✓ MODEL NUMBER**