


TWO-CHANNEL TRANSMITTER

PROGRAMMING INSTRUCTIONS

1. Transmitter:

Inside this 2-channel transmitter is a 10-key switch. Use a pencil or ball-point pen to set the ten keys to the code you select. Note that keys 8 and 10 are not operational.

Set keys to ON or OFF positions from left to right. In the example below, keys numbered 1, 2, 4, 6, 7 and 9 are set to ON, keys numbered 3 and 5 are OFF.

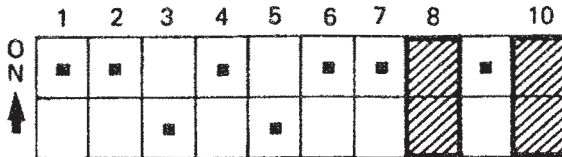


2. Associated Receivers:

A. When using with two 1-channel receivers:

First receiver: Set the keys numbered 8 and 10 to ON position, and other keys to the same ON/OFF position as the corresponding keys in the transmitter.

To match the code of the transmitter in the above example, this receiver's keys numbered 1, 2, 4, 6, 7, 8, 9 and 10 should be set to ON, keys numbered 3 and 5 are OFF.

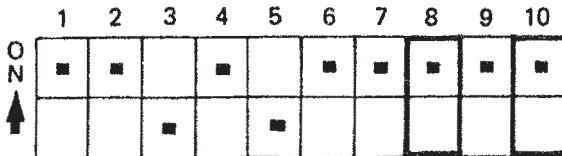

Second receiver: Set the key numbered 8 to ON position, key 10 to OFF position, and other keys to the same ON/OFF position as the corresponding keys in the transmitter.

To match the code of the transmitter in the above example, this receiver's keys numbered 1, 2, 4, 6, 7, 8 and 9 should be set to ON, keys numbered 3, 5 and 10 are OFF.

**For more information, please visit www.devancocanada.com
or call toll free at 855-931-3334**

	1	2	3	4	5	6	7	8	9	10
ON	■	■		■		■	■	■	■	
↑			■		■					■

B. When using with 2-channel receiver:

Set the ten keys in the receiver to the same ON/OFF position as the corresponding keys in the transmitter. Note that keys 8 and 10 are not operational either.

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:**

- ✓ PART NUMBER**
- ✓ DESCRIPTION**
- ✓ MODEL NUMBER**