LiftMaster



Model CPT4 4-Channel Remote Control OWNER'S MANUAL

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Passport transmitter works with all LiftMaster Security **® rolling code garage door openers.

When using the Passport transmitter with an access system or gated entry, contact property manager.

If it is necessary to program a HomeLink® transmitter for an access system, contact property manager.


A WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:


- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

PROGRAMMING


USING THE "LEARN" BUTTON

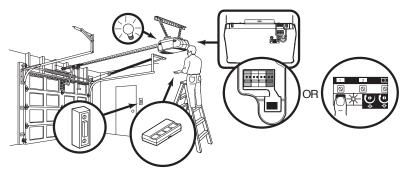


USING THE MULTI-FUNCTION DOOR CONTROL

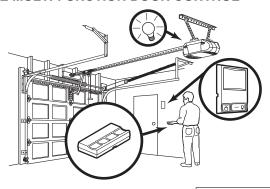

  - 1. Press and release the "learn" button on the motor unit. The learn indicator light will glow steadily for 30 seconds.







Release the button when the motor unit lights blink. It has learned the code. If light bulbs are not installed, two clicks will be heard.



   Press and hold the button on the hand-held remote* that you wish to operate your garage door.







 Release buttons when the motor unit lights blink. It has learned the code. If light bulbs are not installed, two clicks will be heard.




To Erase All Codes From Motor Unit Memory

To deactivate any unwanted remote, first erase all codes:

Press and the hold "learn" button on motor unit until the learn indicator light goes out (approximately 6 seconds). All previous

codes are now erased. Reprogram each remote or keyless entry you wish to use.

NOTE: The fourth button is recommended for use with a garage door opener and cannot be used with an access system. Use buttons 1 through 3 for the access system or other garage door openers.

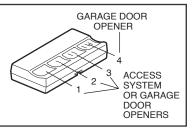

A WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:


- Replace ONLY with 3V2032 coin batteries.
- DO NOT recharge, disassemble, heat above 100°C (212°F) or incinerate.

The Remote Control Batteries

- 1. The lithium batteries should produce power for up to 5 years.
- 2. To replace, pry open case with visor clip or screwdriver, as shown. Insert batteries *positive side up (+)*. See figure 4.
- 3. Dispose of old batteries properly.

	Replacement Parts
	Model CPT4 remote case K74-17929 (circuit board not included)
	3V2032 Lithium battery (2 required) 10A20
ı	Vicor clip 20P127

Figure 4

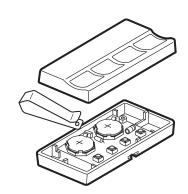

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA

19192 HAY ROAD, UNIT Q SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334 www.devancocanada.com

WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER