

MANARAS RADIO047 GARAGE DOOR RADIO CONTROL PROGRAMMING INSTRUCTIONS

Remove the back cover from both the transmitter and the receiver for access to the code switches. Inside is a 8-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 8-bits dip switch to the code of your choice.

For example, bits numbered 1, 3, 5, 7 are set to ON, bit numbered 2, 4, 6, 8 are OFF in the transmitter as below :

	1	2	3	4	5	6	7	8
ON	■		■		■		■	
↑		■		■		■		■

Then, to match the code of the transmitter, set the same bits numbered at ON/OFF position as the corresponding bits in the receiver as above example.

Be sure both are set to the same code, since a different setting of just one dip switch will prevent operation.

FOR MORE INFORMATION

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334
www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER