32-CHANNEL / 3-BUTTON TRANSMITTER PROGRAMMING INSTRUCTIONS

1. Transmitter

Inside this 32-channel transmitter is a 8-key switch. The keys numbered 1-5 are hard-wired on the circuit board and are not operational. Use a pencil or ball-point pen to set the keys numbered 6, 7, and 8 to ON or OFF positions. In the example below, keys numbered 6 and 8 are set to ON, the key numbered 7 is OFF.

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|---------|---|---|---|---|---|---|---|---|
| 0 | | | | | | | | |
| 1N 1 | | | | | | | | |


2. Associated Receivers

There are totally 32 differently coded receivers can be controlled. Inside each receiver is also a 8-key switch. Set the keys as follows:

- (a) keys 6, 7, and 8: Set to the same ON or OFF positions as the corresponding keys in the transmitter.
- (b) keys 1-5: First decide the number of the receiver and set the keys as the list below:

| NO. | A | В | С | D |
|-----|------------|---------------|---------|------------|
| 1 | 2 | 1, 2 | | 1, |
| 2 | 2, 3 | 1, 2, 3 | 3 | 1, 3 |
| 3 | 2, 4 | 1, 2, 4 | 4 | 1, 4 |
| 4 | 2, 3, 4 | 1, 2, 3, 4 | 3, 4 | 1, 3, 4 |
| 5 | 2, 5 | 1, 2, 5 | 5 | 1, 5 |
| 6 | 2, 4, 5 | 1, 2, 4, 5 | 4, 5 | 1, 4, 5 |
| 7 | 2, 3, 5 | 1, 2, 3, 5 | 3, 5 | 1, 3, 5 |
| 8 | 2, 3, 4, 5 | 1, 2, 3, 4, 5 | 3, 4, 5 | 1, 3, 4, 5 |

For example, for the receiver numbered B5 the keys 1, 2, 5, and 7 are set to OFF.

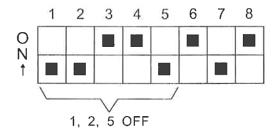

For more information, please visit www.devancocanada.com or call toll free at 855-931-3334

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA 19192 HAY ROAD, UNIT Q SUMMERSTOWN, ON KOC 2E0

TOLL FREE: 855-931-3334 www.devancocanada.com

WHEN ORDERING REPAIR PARTS PLEASE SUPPLY THE FOLLOWING INFORMATION:

✓ PART NUMBER✓ DESCRIPTION✓ MODEL NUMBER