

CB-4G QUICK START GUIDE

SIM Service



This product comes with a SIM card, which will run on At&T service. You must have At&T signal in the area for this unit to operate. Please survey the location for signal BEFORE installing this device.


Earthing



This product **MUST** be EARTHED in the following states in order to qualify for manufacturers warranty
FL, LA, MS, AR, OK, MO, AL, IL, KY, TN, IN, KS, SC, GA, IA, TX, OH, NC, NE, MD, WV, VA, DE

Site Wiring


Use 110V surge protection!

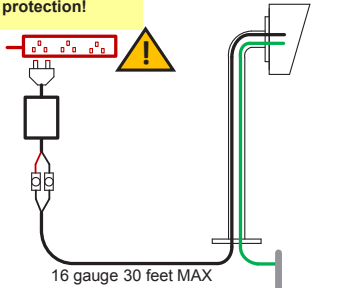

16 gauge 30 feet MAX


Earth rod close as possible to device!

Wiring Relays

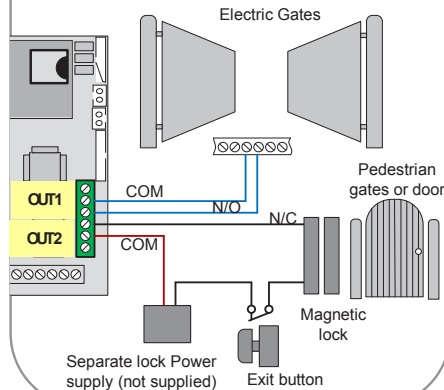


Separate lock Power supply (not supplied) Exit button

 Inserting SIM



Power OFF!
 NANO SIM
 45 chamfer IN pads DOWN


Power

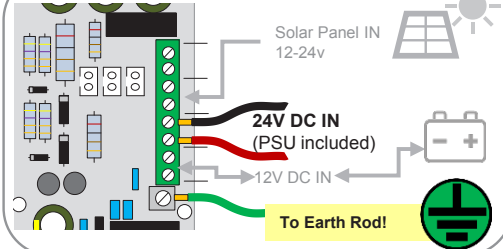

To Earth Rod!

LEDs

Ensure your SIM is activated!

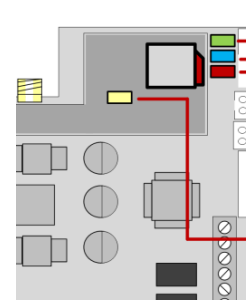


- CPU**
 Flashing = standby
 Constant ON/OFF = busy
- SIGNAL STRENGTH**
 1 flash = poor (1 bar)
 2 flashes = low (2 bars)
 3 flashes = good (3 bars)
 4 flashes = Strong (4 bars)
 5 flashes = searching
- POWER**
- MODEM**
 Flashing = standby
 Constant ON/OFF = searching

Basic Programming


- 1.
- 2.
- 3.
- 4.
- 5.

Check for Signal
 Use your phone to send SMS *20# to the intercom cell number.
 Intercom should reply, 1-31 (1=min, 31=max)
 Less than 10 is too low!

 
Setting APN
 Only do this if the signal reply is 3G. APN details for various networks in main manual and can be searched online. To change APN send SMS below..



To Set Dial out phone numbers..
 Send SMS below..

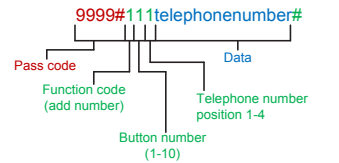

 To program keypad codes..
 Send SMS below..



Scan to view full instructions



SCAN ME

