CP-LX720PROGRAMMING INSTRUCTIONS

Internal Cycle Counter

- From the Parameter Menu select "Cycle Counter" and press ENTER.
- Press ENTER again when display says "Counter Show Val."
- The cycle counter will be displayed and cannot be erased because it is used for maintenance.
- Press BACK when done.

Reset All Parameters

- From the Parameter Menu select "Reset All Parameters" and press ENTER.
- Press ENTER again.
- You will be prompted to hold the ENTER key for 10 seconds. The display will count down to zero. This will restore the operator to factory defaults except for the internal cycle counter. If you let go before the 10 seconds are up, the parameters are not reset.
- Press BACK when done.

RADIO CONTROLS

Three Button Open, Close, Stop

- These buttons are mapped to the same functions as the wired control.
- CLOSE will not work in modes that require constant pressure: C2, D1, E2.

Single Button

- This function is mapped to the same functions as the Single Push Button.
- The CLOSE function does not work in C2 or E2. None of the functions work in D1.

Three Button, Three Door

- Each button works independently to control three different doors.
- The function of each button is mapped to the same functions as the Single Push Button. The CLOSE function does not work in C2 or E2. None of the functions work in D1.