



3 Button Remote Programming Instructions

WARNING

Moving Door can cause serious injury or death.


- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
- **Keep people clear** of opening while door is moving.
- **Do NOT** allow children to play with the Remote or door opener.

If **safety reverse** does not work properly:


- **Close door then disconnect opener** using the manual release handle.
- **Do NOT** use Remote or door opener.
- Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

1 Putting Opener into Programming Mode


New Genie® Openers

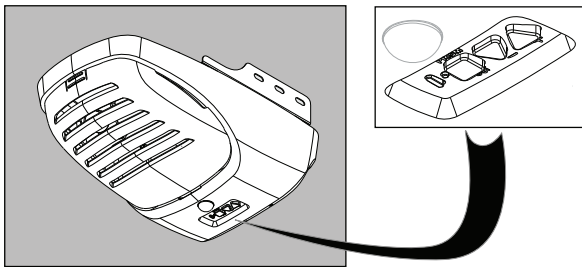

1. Press and hold the program button until the round LED turns blue, then release.

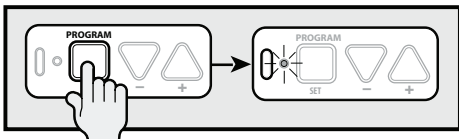



2. The round LED will go out and the long LED will begin flashing purple.

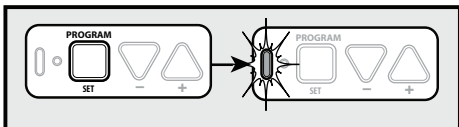

Proceed to step 2.

-OR-

Genie® Openers and External Receivers Manufactured between 1995 to 2011

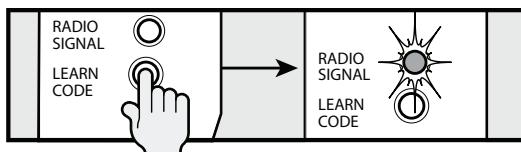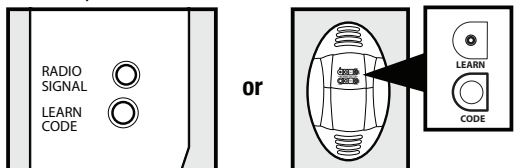

1. Press & Release Learn Code button once. The red LED will begin to flash.

Proceed to step 2.

 
2 Programming a Remote to your Opener

NOTE: Once in programming mode, you will have approximately 30 seconds to perform this step.




1. Pull protective battery tab from remote.

Note: While programming remote buttons, stand at least 5 feet away from the opener. This ensures you have proper communication between the remote and the opener.



 2. Slowly press and release the remote button of your choice two times. The opener LEDs will flash and go off, indicating you have successfully programmed your remote.




3. Press and release the same button a third time and door will open or close. It is possible to press the remote button too quickly or lightly. If the LEDs do not go OFF, press the remote button several more times to achieve confirmation.


3 Lost or Stolen Remote/Erasing all Remotes

New Genie® Openers

1. Press and hold the program button until the round LED turns blue, then release.

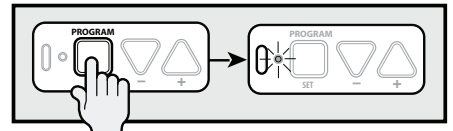

2. Press and hold the Up(+) Down (-) buttons at the same time, until the both LEDs flash blue and go OFF.

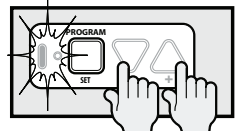

Genie® Openers and External Receivers Manufactured between 1995 to 2011

- To erase all remote devices from all other types of Genie® openers, Press and hold the Learn Code Button until the LED stops blinking.



Start at step 1 to reprogram your remotes.

NOTE: Clearing remote control memory from the power head will clear ALL programmed remotes and keypads. Your opener will no longer recognize any signal from any remote device, including a missing remote device.

4 Battery Replacement

Replace remote battery with **CR2032** coin cell battery.

1. Open the remote case using a washer or coin that fits into the slot at the top of the remote.
2. Replace battery. Match battery polarity symbols inside battery housing.
3. Align components and snap case closed.

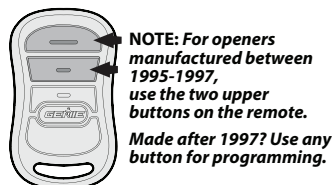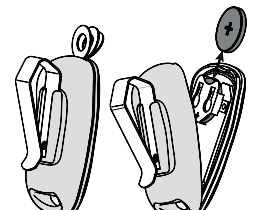

NOTE: For openers manufactured between 1995-1997, use the two upper buttons on the remote. Made after 1997? Use any button for programming.

FCC and IC CERTIFIED

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular situation. If this equipment does cause harmful interference to radio or television reception, which may be determined by turning the equipment OFF and ON, the user is encouraged to try and correct the interference by one or more of the following measures: (a) Re-orient or relocate the receiver antenna, (b) Increase the separation between the opener and receiver, (c) Connect the opener into an outlet on a circuit different from that to which the receiver is connected, and (d) Consult your local dealer. Any modifications or changes to this equipment which are not expressly approved by the manufacturer could void the users authority to operate the equipment.

***HOW TO ORDER
REPAIR PARTS***

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER