


Diagramme de raccordement PS241F Wiring diagram

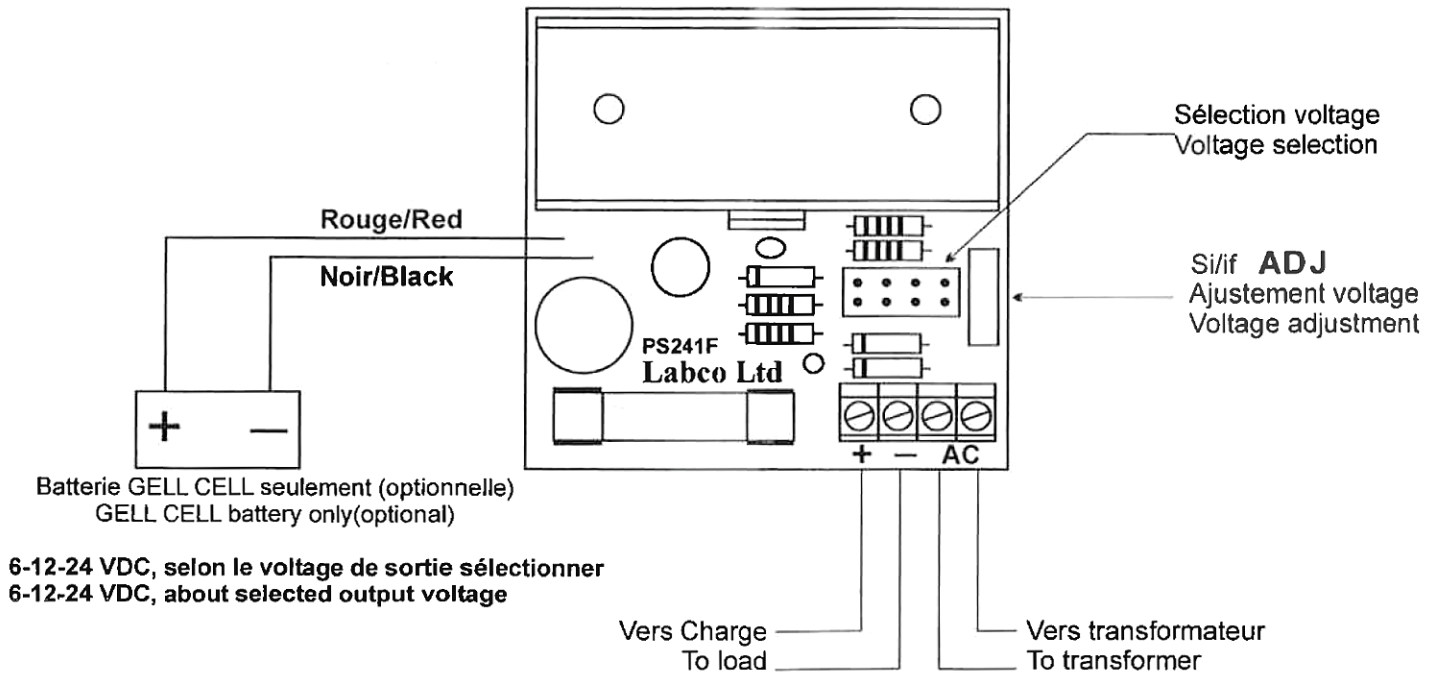

*Note / Notice:

- Sélectionner le transformateur pour se conformer aux normes du manufacturier (Garantie).
- Select transformer setting, according with manufacturer's specifications (Warranty).

Voltage de sortie Output voltage	Transformateur Transformer		Batterie Battery
	Volts	VA	Voltage requis Required voltage
6VDC	6-9VAC	20	6VDC
9VDC	9-12VAC	20	-----
12VDC	12-14VAC	30	12VDC
13.8VDC	14-16VAC	30	12VDC
18VDC	18-20VAC	30	-----
24VDC	24-26VAC	40	24VDC

Note 1: Valeur minimal requise \ Minimum power required

Note 2: Batterie \ Battery 2 X 12VDC(series) or 1 X 24VDC

IMPORTANT

Transformateur requis.
Ne jamais raccorder ce
circuit directement à une
source de 120VAC

Transformer required.
Do not connect this
circuit to the 120VAC line

For more information, please visit www.devancocanada.com
or call toll free at 855-931-3334

***HOW TO ORDER
REPAIR PARTS***

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER